




## Knock Monitor Connection for Subaru Models

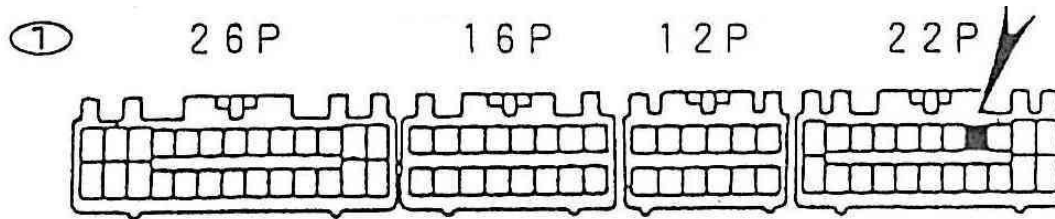


Connector 1, 4<sup>th</sup> pin from top right on 22 pin connector

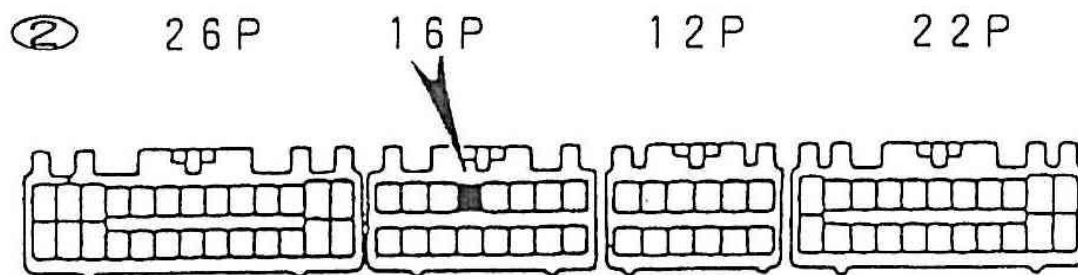


Connector 2, 4<sup>th</sup> pin from top left of 16 pin connector.

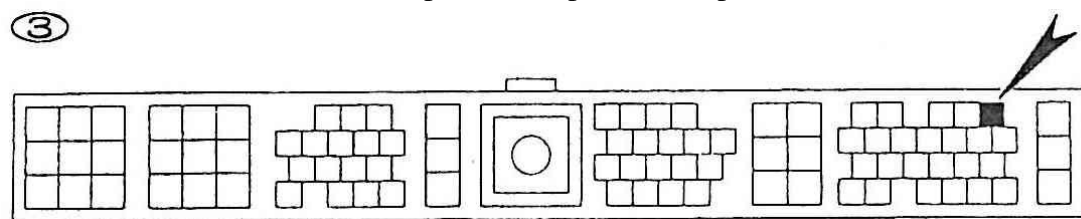

Connector 3, Top right of multi connector

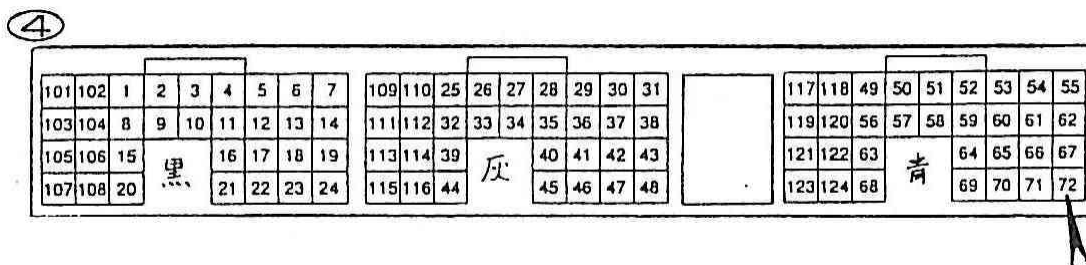


Connector 4, Bottom right, Pin 72

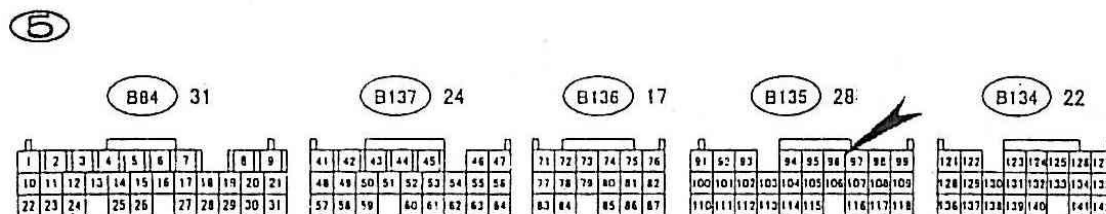

Connector 5, 4<sup>th</sup> pin from top right of 28 pin connector (B135) Pin 96

Identify the knock sensor signal wire from the above diagram and connect the white wire from the supplied harness to it. A splice connector is supplied for use if desired.

See over for vehicle model reference.

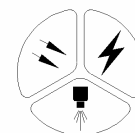

Model	Chassis Code	Engine Code	Year	ECU
Imprezza WRX STi	GC8 – (Auto)	EJ20	1996 on	3
	GC8 – (Manual)	EJ20	1993 - 96	2
	GC8 – (Manual)	EJ20	1996 on	1
	GC8 – (Manual)	EJ207	1998 on	4
	GDB	EJ207	2001 on	5
Legacy	BG5	EJ20	1993 on	4
	BD5	EJ20	1993 on	1
	BH - BE	EJ207	1998 on	2
	BD5 – (Auto)	EJ20	1996 on	3